

SANITISER STAND – 22” INSTRUCTIONS

PN: 223LHS-ACC-STAND

CONTENTS



X1
Stand Base
PART A



X1
22” Bracket
PART B



X1
Stand Pole
PART C



X4
Self Adhesive
Rubber Feet
PART D



X1
7mm
Alan Key
PART E



X2
M8 X 20mm
Countersunk
Base Screws
PART F



X4
M5 X 12mm
Countersunk
Base Screws
PART G




X4
M5 X 12mm
Countersunk
Base Screws
PART H




X3
Power Cable
Ties
& Bases
PART I

STEP 1

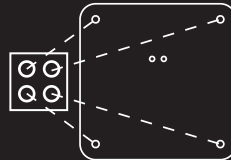

Place an
Adhesive
Rubber pad in
each of the
four corners.
PART D


STEP 2

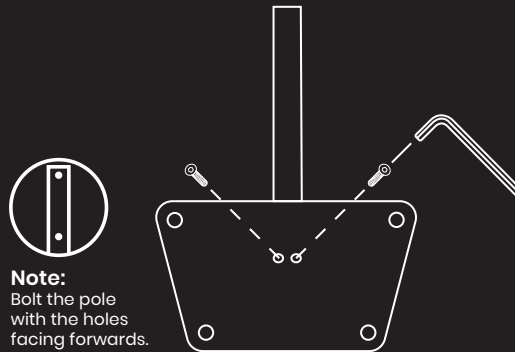

Note:
Bolt the pole
with the holes
facing forwards.

Bolt the Base (**Part A**) and the Pole (**Part C**) together using the 2 M8 x 20mm screws (**Part F**).


STEP 3

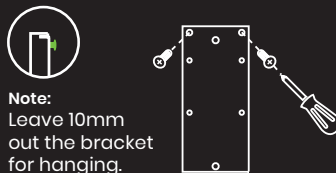

Note:
Leave 10mm
out the bracket
for hanging.

Screw two M5 x
12mm (**Part G**)
into the top two
threaded holes
on the 22”
Bracket (**Part B**).

STEP 4

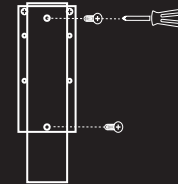

Fix the 22” Bracket (**Part B**) to the Pole (**Part C**) using the M5 X 12mm Countersunk Screws (**Part G**).


STEP 5



Hang the sanitiser unit on the two M5 x 12mm Screws (**Part G**) stuck out from the 22” Bracket (**Part B**).

The screws should go into the unit and drop down to hang.

STEP 6

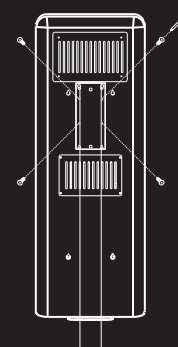

Using the M5 x 12mm Screws (**Part H**), screw the Hand Sanitiser to the stand.

Note: Do not over tighten.

Use provided cable ties (**Part I**) to hide the power lead down the back of the stand.

The screen will now be successfully mounted to the stand.