


SANITISER STAND – 10” INSTRUCTIONS

PN: 103LHS-ACC-STAND


CONTENTS



X1
Stand Base
PART A

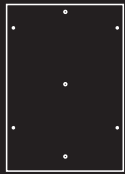

X1
10” Bracket
PART B

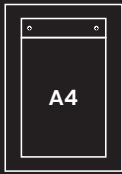

X110° Clip
Frame Bracket
PART C



X4
Self Adhesive
Rubber Feet
PART D



X1
Stand
Pole
PART E



X1
7mm
Alan Key
PART F



X2
M8 X 20mm
Countersunk
Base Screws
PART G



X4
M5 X 12mm
Countersunk
Base Screws
PART H




X4
M5 X 12mm
Countersunk
Base Screws
PART I



X3
Power Cable
Cable Ties
& Bases
PART J

STEP 1

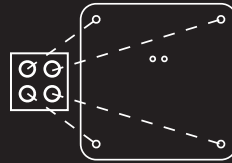


Place an
adhesive
rubber pad in
each of the
four corners.

STEP 2




Note:
Bolt the pole
with the holes
facing forwards.

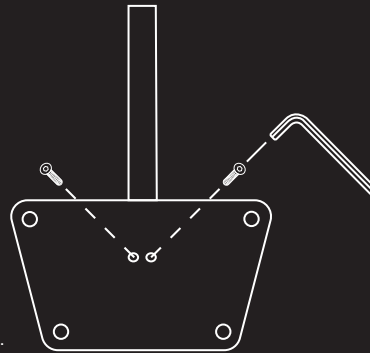


Bolt the Base (**Part A**) and the Pole (**Part E**) together
using the 2 M8 x 20mm screws (**Part G**).

STEP 3

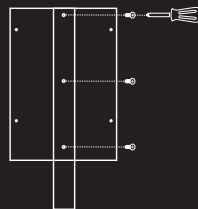


Screw two M5 x
12mm (**Part H**)
into the top two
threaded holes
on the 22”
Bracket (**Part B**).

STEP 6

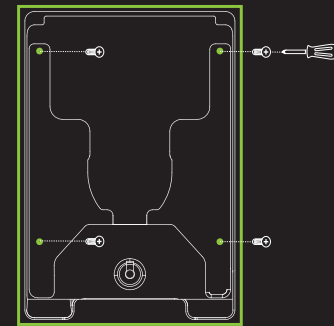

Open the Lid of the
lid on the Sanitising
unit and using the
M5 x 12mm Screws
(**Part I**) fix the unit
to the stand braket
(**Part A**)


STEP 5

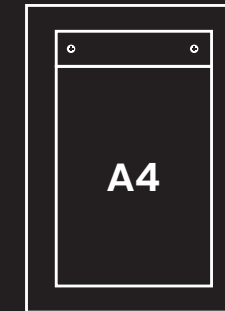

Click the back
bracket with A4
Clip Frame (**Part C**)
into the front of the
bracket.

The screen will now
be successfully
mounted to the
stand.

STEP 4

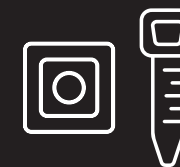

Use the provided
Cable Ties & Bases
to secure the
power cable to the
back of the stand.